

Installation with Applicator

This is the Standard method applicable to most tires.

1) Remove the old valve core from the tire.



5) Gently pour the beads into the valve stem.



2) Cut a corner of the bag and pour the beads into the Applicator bottle.



6) If you pour too fast and they get stuck, just tap on the valve stem with your finger.



3) Screw the plastic tube down onto the valve stem.



7) Install the filtered valve cores.



4) Attach the tube to the end of the applicator bottle.



That's all there is to it!

Just start driving and the beads will do the rest!

Please don't hesitate to contact us if you have any problems with the fitting.